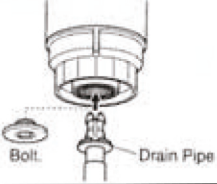
 
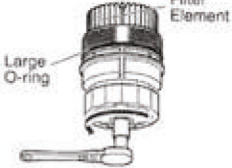
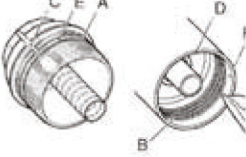
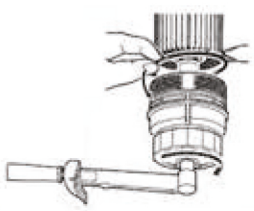
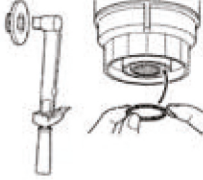


## Mounting instruction

 <p>Bolt. Drain Pipe</p>		<p><b>1. Oil drainage</b> insert drain tube and drain oil <u>caution!</u>: hot oil drained from tube remove drain tube</p>
 <p>Filter Element Large O-ring</p>		<p><b>2. Replacement of the filter</b> remove cap and oil which is left over remove oil filter and O-ring clean the filter housing</p>
		<p><b>3. Install new oil filter</b> apply a thin film of oil on the O-ring install cap add engine oil</p> <p><b>4. Oil leakage check</b> check for leaks after running the engine for 3 min.</p>