



- 1** When installing this valve, please be aware, that to avoid damaging the valve, you must connect it to the plug of the car first, while activating your tester function “replace EGR valve” - the valve head will retract slightly, and this will allow you to install it correctly into the cooler module.

- 2** This EGR valve must also be adopted to engine controller!

Reason: if there is an error displayed after installation of EGR to the car (e.g. new part not detected or new part no function) then the reason could be that EGR is not adopted to engine controller.

Please find at tester menu function „Adopting of EGR valve”

