

IMPORTANT NOTICE
REMOVING AND RECONFIGURING AIR FITTING COLLET
FROM AIR COMPRESSOR PUMP
TO RESOLVE UNSEATED AIR LINE

**IF DURING INSTALLATION, THE AIR LINE IS NOT SEATING/SEALING COMPLETELY,
THE FOLLOWING STEPS MUST BE TAKEN.**

1. REMOVE THE AIR LINE FITTING FROM THE AIR COMPRESSOR PUMP. (FIGURE 1)



FIGURE 1

2. FISH OUT AND REMOVE THE COLLET FROM THE CAVITY ON THE COMPRESSOR PUMP. (FIGURE 2)



FIGURE 2

SEE REVERSE SIDE

3. INSTALL THE AIR LINE FITTING ON TO THE AIR LINE, FOLLOWED BY THE COLLET.

NOTE: THE LIP OF THE COLLET WILL NOW BE FACING THE THREADS OF THE AIR LINE FITTING. (FIGURE 3)



FIGURE 3

4. ENSURE COLLET AND AIR FITTING ARE FLUSH TOGETHER ON THE AIR LINE. (FIGURE 4)



FIGURE 4

5. REINSTALL THE AIR FITTING AND AIR LINE TO THE AIR SUSPENSION COMPRESSOR. SNUG TIGHT THE FITTING WITH A WRENCH. (FIGURE 5)

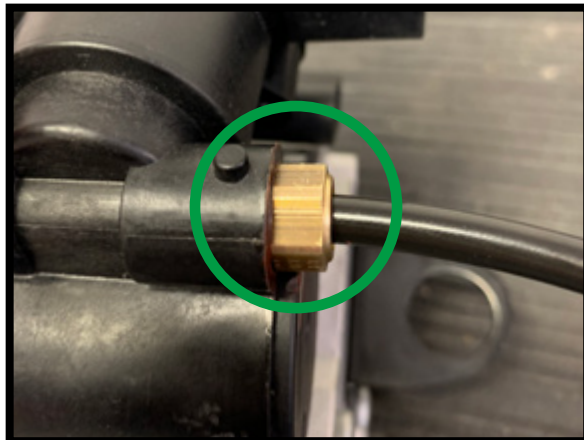


FIGURE 5