



WARNING



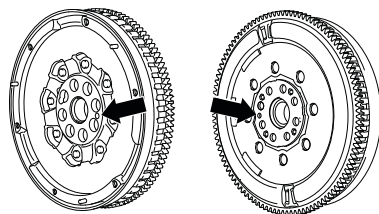
Not following the instructions below may result in damage of the product supplied by us and refusal of the claim due to improper installation of the product.

BEFORE INSTALLATION THE FOLLOWING MUST BE CHECKED:

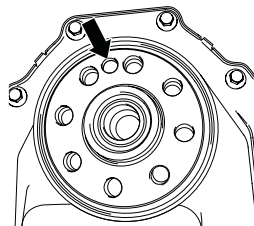
The Dual Mass Flywheel in these cases (415056410, 415079610, 415101610) is equipped with a sensor ring. It is crucial to align this sensor ring accurately with the crankshaft to ensure proper vehicle starting and operation.

1

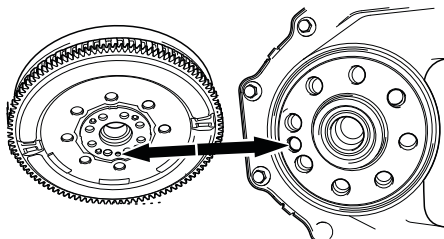
Locate the hole in the DMF.

**2**

Locate the indent in the crankshaft.

**3**

As opposed to a conventional dowel pin, these DMFs are timed via a hole in the DMF (Picture 1) and an indent in the crank shaft (Picture 2).



ATTENTION!

Before installation refer to the vehicle manufacturer's instructions

