


THAT DRIVES US! KAVOPARTS.COM



How to exchange the electric water pump

1. Take out the cover in the trunk, remove the "Minus terminal" of "Sub battery".



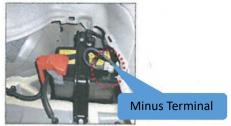

2. Remove the "Service Plug" of the main battery. (Caution) Electricity remains in inverter.









- 3. Lift up the vehicles and remove the under cover.
- 4. Loosen the LLC cock and take the LLC out. And Lift down the car.

 Before lift down, do NOT forget to take out the bottom bolt of the electric water pump.

 (Caution) The bolt cannot be removed unless vehicles are in lift position.



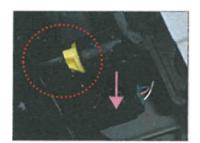

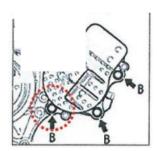

- 5. Open the engine room and remove the air cleaner.
- 6. Remove the connecter of the electric water pump and remove the water pump.









7. Install the new water pump, insert the connector until click, and install the air cleaner.





Torque Long bolt (A) 26N*m Short bolt (B) 21N*m

- 8. Lift up the car, and install the bottom bolt, and install yellow bolt for water drainage.
- 9. Lift down the car and pour LLC. Clip the cap of reservoir tank.
- 10. Put back the service plug and the minus terminal of sub battery





Minus terminal [CAUTION]
After connecting minus terminal make sure to close it with wrench

11. To circulate LLC, start engine. Put heater on to remove air.

You need to set maintenance mode to start engine.

<Please set to maintenance mode>

Push power switch twice without stepping on brake and tgurn ignition n.

- 1. Full slot the accelerator twice with shift P.
- 2. Full slot the accelerator twice with shift N.
- Full slot the accelerator twice with shift P.
 Do these 1 3 within two seconds.
- 4. Hybrid system error will be turned on in the display.
- 5. Wile stepping on brake, trun power switch on Then, READY lamp will turn on, on the display.

<Maintenance mode off>

Turn power switch off to end maintenance mode.

Make sure you turn off the "maintenance mode" before driving.

- 12.Lift up the car, and double check whether leak has not happened.
- 13. Put back the cover in the trunk.





Ŧ

