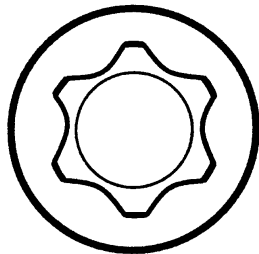
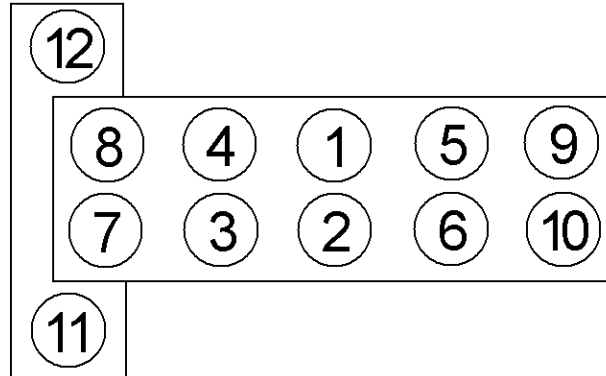


Anziehvorschrift Zylinderkopf**Tightening Instructions for Cylinder Head****Instructions de serrage pour culasse****Prescripciones de apriete para culatas****572.500**passend für / suitable for
adaptable à / adaptable a**Das Original**Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo125.930
M 8x1,25x119Anziehen/
Tightening/
Serrage/
Apriete

- Pos. 1-12: 25 Nm
- ⊙ Pos. 1-12: 60°
- ⊙ Pos. 1-12: 60°
- ⊙ Pos. 1-12: 60°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 73,9 mm; ÷: 0,57 mm

Mot: Z12XEP; Z14XEP

1.2-1.4 ltr. (55-66 kW 75-90 PS)

Opel Agila A, Astra G, Astra H, Combo

Cors C, Corsa D, Meriva A

Suzuki Wagon R

Elring-Serviceteam

Fon +49 7123 724 799

Fax +49 7123 724 798

service@elring.de

24/01/22

572.500