



IMPORTANT NOTICE



PROPER INSTALLATION & INFLATION PROCEDURES MUST BE FOLLOWED TO AVOID PERMANENT DAMAGE TO THE PART. WARRANTY WILL BE VOIDED IF THESE PROCEDURES HAVE NOT BEEN FOLLOWED.

 


AIR SPRINGS INFLATED WITHOUT FOLLOWING THE MANUFACTURER'S SPECIFICATIONS/NOT SUPPORTING THE VEHICLE WEIGHT CAN CAUSE THE FORCE TO DISTRIBUTE UNEVENLY, WHICH MAY LEAD TO PREMATURE PART FAILURE.



IMPROPER INFLATION EXAMPLES

Air springs inflated without following the manufacturer's specifications/not supporting the vehicle can cause the force to distribute unevenly, which may result in crimp ring failure.

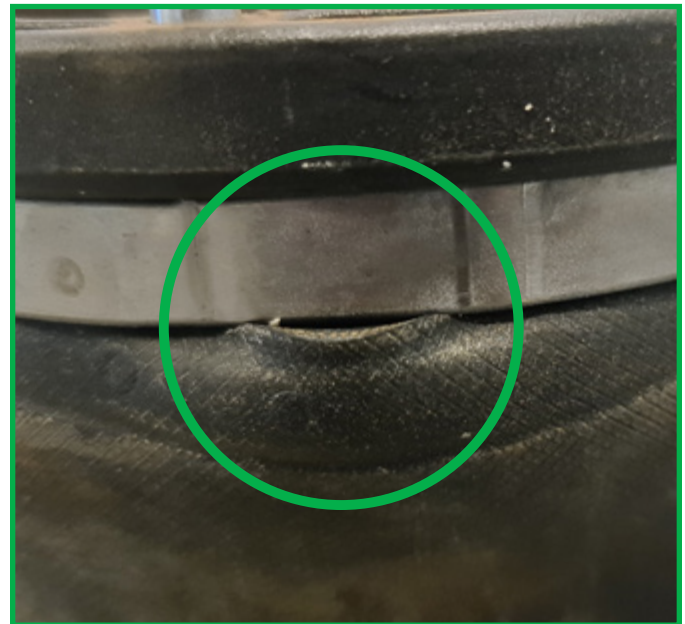

Arnott™

Suspension Products

Arnott US Business Office:

www.arnottinc.com

100 Sea Ray Drive
Merritt Island, FL 32953

Call: 800.251.8993

321.868.3016

Fax: 321.868.3703

Email: techassistance@arnottinc.com

Arnott Europe Business Office:

www.arnotteurope.com

Docterskampstraat 1E/1F, 3
5222 AM 's-Hertogenbosch (NL)

NL Phone: +31 73 7850 580

DE Phone: +31 85 2087 438

 
UK Phone: +44 203 3186 124

BE Phone: +32 258 846 90


ES Phone: +34 91 901 10 56

FR Phone: +32 78 48 46 93


Email: info@arnotteurope.com

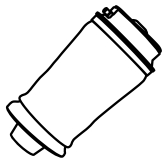


Air Springs

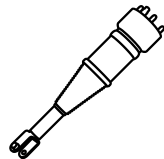 


Struts

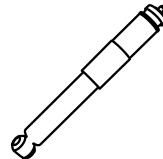 

Shocks

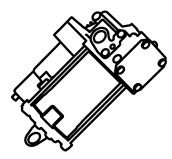 

Compressors

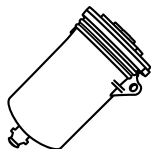


Dryers



Coil Spring
Conversion Kits



Valve Blocks

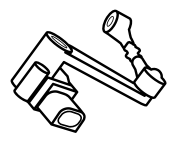

Ride Height
Sensors