

## Mounting instruction for brake pads

Einbauhinweis für Bremsbeläge

Instrucciones de montaje para juego de pastillas de freno

Instrucciones de montage pour jeu de plaquettes de frein

Инструкция по установке комплектов тормозных колодок

Istruzioni di montaggio per pastiglie freno

**MEYLE no. 025 231 5715 | 025 231 5715/PD**

**Short no. MBP1772 | MBP1772/PD**

To fit/Passend für/Aptos para/Convient pour/для/Adatti per

**MERCEDES-BENZ**



**Installation by qualified personnel only.  
Car manufacturer's instructions to be  
observed closely.**

Einbau nur durch geschulte Fachkräfte. Hinweise der Fahrzeughersteller genau befolgen.


El montaje sólo debe realizarse por un técnico instruido. Siga exactamente las indicaciones del fabricante del vehículo.

Installation uniquement par main-d'oeuvre spécialisée. Suivre les indications du fabricant d'automobile pour l'installation.


Монтаж должны производить только обученные специалисты. Следует точно соблюдать инструкции завода-изготовителя автомобиля.

Montaggio solo da parte di meccanici specializzati. Sono da seguire esattamente le istruzioni fornite dal costruttore del veicolo.

1

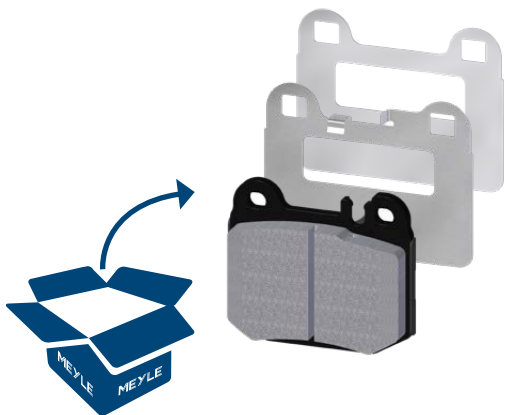

2

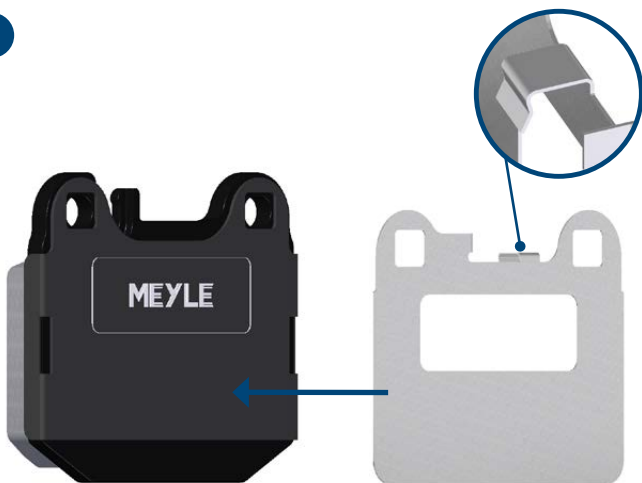


3



4



5

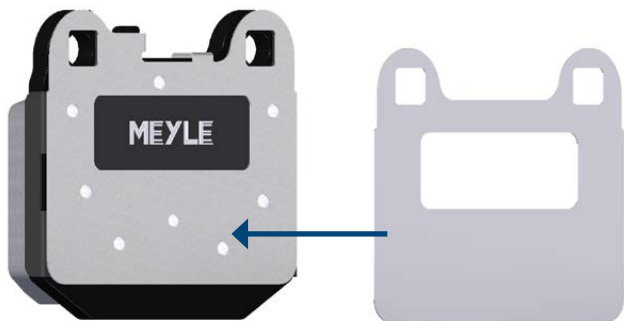

6

