

## FITTING RECOMMENDATION


Peugeot 106



FI028EU

**⚠ Compress the suspension system while tightening.**

- Mounting bolts should be tightened to the correct torque, as shown in the chart below, only when the correct wheel height / length (X) is achieved. Depending on car model.

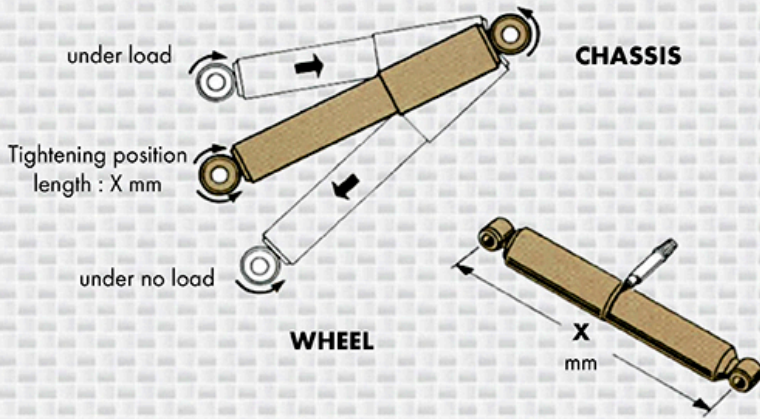

To facilitate installation refer to chart below, mark a reference line when the correct length (X) is achieved on the new shock absorber.

The reference line should be used as a guide during the installation process. Ensure the reference line lines up with the dust shield before tightening the mounting bolts.

Peugeot 106	XN, XR, XT	X = 306 mm
	XSi	X = 294 mm

