

FITTING RECOMMENDATION


ZX, Xsara



FI038EU


⚠ Compress the suspension system when tightening.

- Mounting bolts should be tightened to the correct torque, as shown in the chart below, only when the correct wheel height / length (X) is achieved. Depending on car model.

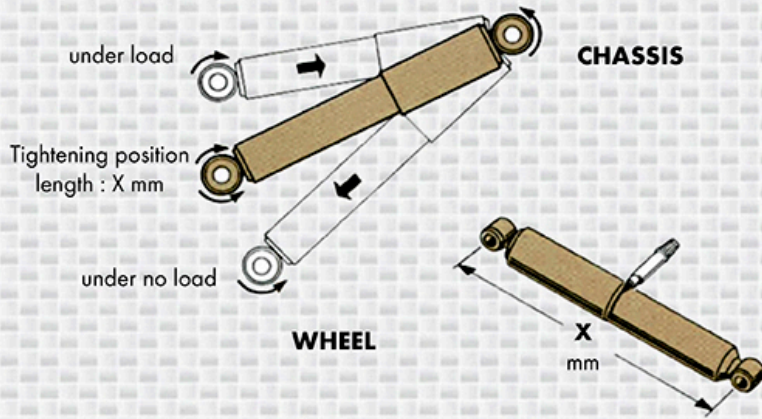

To facilitate installation refer to chart below, mark a reference line when the correct length (X) is achieved on the new shock absorber.

The reference line should be used as a guide during the installation process. Ensure the reference line lines up with the dust shield before tightening the mounting bolts.

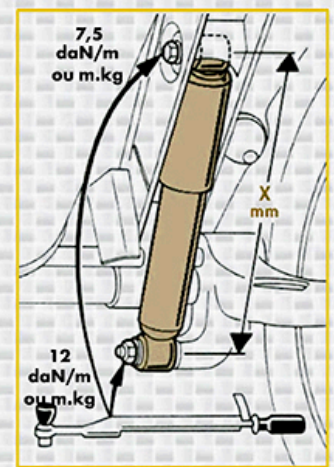

ZX	ALL TYPES	X = 280 mm
	SPORT	X = 290 mm

