



|                      |          |     |
|----------------------|----------|-----|
| <b>Mercedes-Benz</b> | Sprinter | 906 |
| <b>Volkswagen</b>    | Crafter  | 2E  |
|                      |          | 2F  |

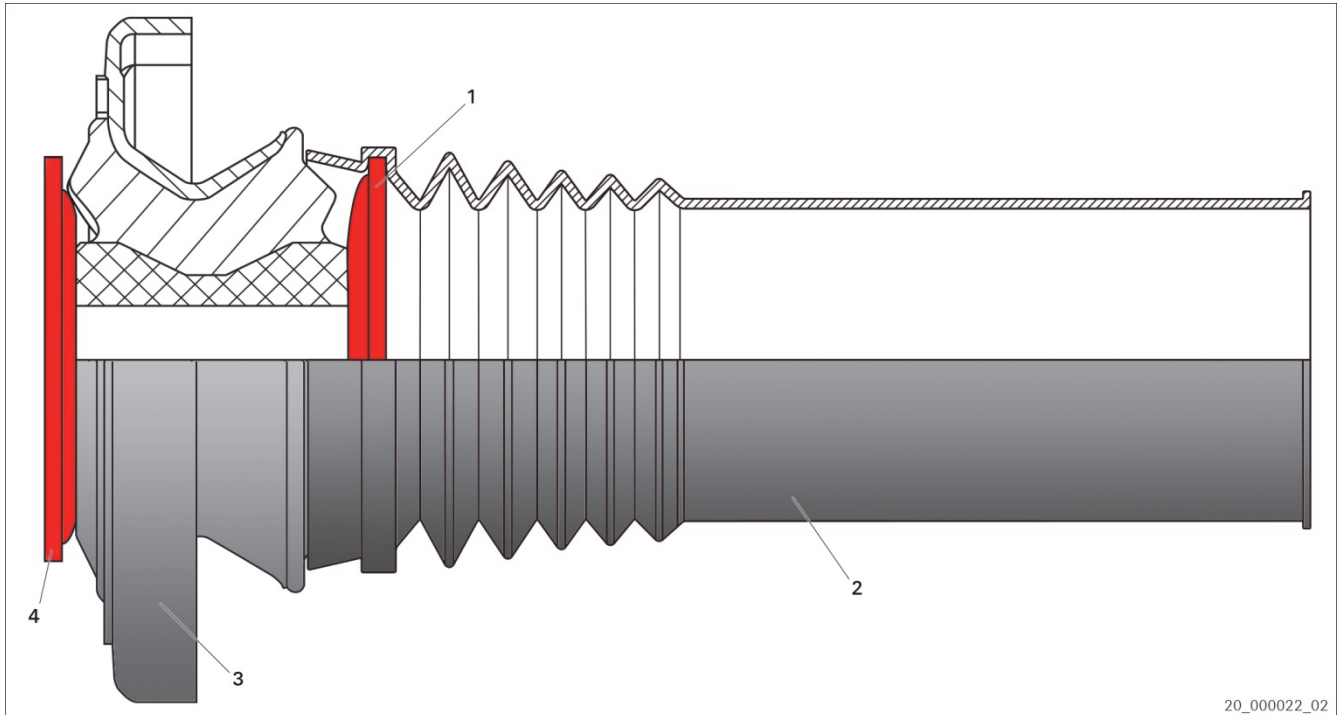


Fig. 1: Suspension-strut mount with service kit

- |                                |                   |
|--------------------------------|-------------------|
| 1 Washer                       | 2 Protective tube |
| 3 Suspension-strut mount (FSL) | 4 Washer          |

1. Remove suspension-strut mount (3) and protective tube (2).  
Do **not** dispose of washers (1; 4)!
2. Position washer (1) in new protective tube (2).
3. Attach protective tube (2) with washer (1) to shock absorber.
4. Attach suspension-strut mount (3) and washer (4) to shock absorber.
5. Tighten with new nut and correct tightening torque.  
Observe the vehicle manufacturer specifications.



[www.zf.com/serviceinformation](http://www.zf.com/serviceinformation)