



WP6652

Water Pump - Fitting Instructions

When installing WP6652, the electrical unit from the original pump must be fitted to the FAI pump. The FAI pump design which does differ from the OE pump, maximises fluid flow reducing the chances of the engine overheating. Refer to manufacturers recommendations & procedures regarding working with electrical systems.

Please refer to fitting instructions below.


OE Design (with sleeve)

Remove the electrical unit from the failed pump



FAI Design (without sleeve)

Connect the electrical unit to the new pump

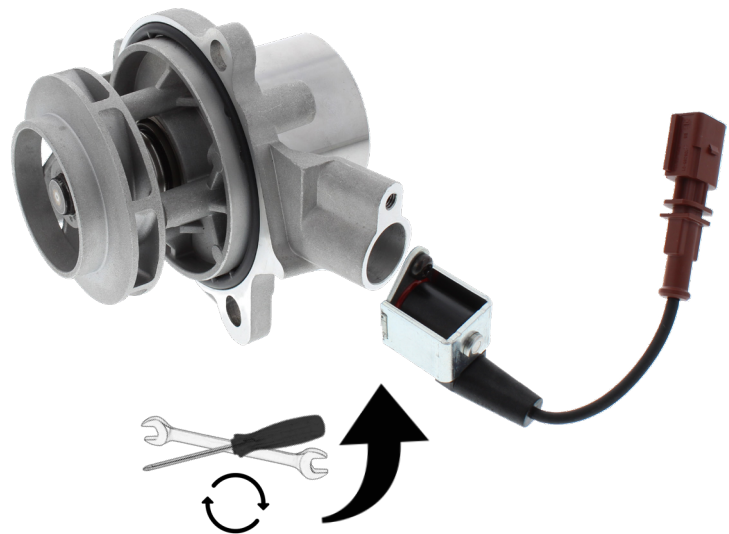

Please note: It is important to re-connect the solenoid to avoid an error message or warning light displaying on the instrument panel.



Best Availability. Best Value.
Best Quality. Best Service.

PA0039



+44 (0) 1525 351800



faiauto.com